



**CTOUCH**<sup>®</sup> Laser<sup>air</sup>

#### CAUTION

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This User Manual includes detailed usage instructions for your product. Please read this manual thoroughly.
- Figures and illustrations in this User Manual are provided for reference only and may differ from actual equipment appearance. Equipment design and specifications may be changed without notice.

# Contents

Important Information	1
Important Safety Precautions	2
Standard Accessories	5
Identification of Controls	6
Remote Control	8
Connections	10
Basic Operations	12
Menu List	13
Home Page Overview	15
System Settings	16
Network Settings	17
Using USB Multi Media Player	19
Troubleshooting	22
Specifications	23

**Note:** A digital PDF manual to zoom in for better viewing can be found at: [www.ctouch.eu](http://www.ctouch.eu)

# IMPORTANT INFORMATION

If the unit is not positioned in a stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the unit.
- Only use furniture that can safely support the unit .
- Ensure the CTOUCH interactive display is not hanging over the edge of the supporting furniture.
- Do not place the CTOUCH interactive display on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the CTOUCH interactive display to a suitable support.
- Do not place cloth or other materials between the CTOUCH interactive display and supporting furniture.
- Do not let children climb on furniture to reach the CTOUCH interactive display or its controls.
- CTOUCH is not necessarily responsible nor obligate providing support for the App operation on the inside Android OS.

## **Warning:**

**To prevent the spread of fire, keep candles or other open flames away from the CTOUCH interactive display all the times.**



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your CTOUCH interactive display. This label is located on the back of your CTOUCH interactive display.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your CTOUCH interactive display.

Electricity may cause personal injuries and property damage if improperly handled. The CTOUCH interactive display has been engineered and manufactured with the highest priority on safety. But IMPROPER USE CAN RESULT IN POTENTIAL ELECTRIC SHOCK OR FIRE HAZARD. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your CTOUCH interactive display, please read the following precautions carefully before using the product.

**1. Read these instructions**---All operating instructions must be read and understood before the product is operated.

**2. Keep these instructions**---These safety and operating instructions must be kept in a safe place for future reference.

**3. Note all warnings**---All warnings on the product and in the instruction manual must be observed closely.

**4. Follow all instructions**---All operating instructions must be followed.

**5. Attachments**---Only use attachments/accessories specified by the manufacturer. Do not use attachments which are not recommended by the manufacturer. Use of improper attachments can result in accidents.

**6. Power source**---This product is intended to be supplied with a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for a long period of time, unplug it from the wall outlet and disconnect the cable system.

**7. Power cord protection**---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

**NOTE:** Where the mains plug or an appliance coupler is used as the disconnected device, the disconnected device shall remain readily operable.

**8. Overloading**---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.

**9. Entering of objects and liquids**---Never insert an object into the product through vents or openings. High voltages are present in the product and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.

**10. Servicing**---Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

**11. Damage requiring service**---If any of the following conditions occurs, unplug the power cord from the AC outlet and request a qualified service technician to perform repairs.

- When the power cord or plug is damaged.
- When liquid is spilled on the product or when objects have fallen into the product.
- When the product has been exposed to rain or water.
- When the product does not operate properly as described in the operating instructions.

Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause damage, which often requires extensive adjustment work by a qualified technician.

e. If the product has been dropped or the cabinet has been damaged in any way.

f. When the product displays an abnormal condition or exhibits a distinct change in performance. Any noticeable abnormality in the product indicates that the product needs servicing.

**12. Replacement parts**---In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.

**13. Safety checks**---Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

**14. Wall or ceiling mounting**---When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature.

## Important Safety Precautions



**15. Stand---**Use only with the trolley stand or wall mount specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley stand or wall mount. Placing the product on an unstable base can cause the product to fall, resulting in possible serious injuries as well as damage to the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



**16.Careful move---**When a trolley is used, be cautious when moving the trolley/apparatus combination to avoid injury from the product tipping over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley.

Never attempt to move the CTOUCH interactive display unless the AC power cord has been disconnected.




**17. Lightning---**Unplug this apparatus during thunder storm or when unused for long periods of time.

For added protection during a thunder storm, or when the CTOUCH interactive display is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.




**18. Do not use this apparatus near water---**for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, and the like. The apparatus should not be exposed to dripping or splashing liquids and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

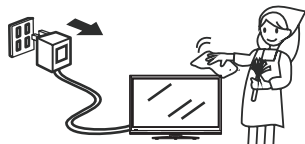

Do not use immediately after moving from a low temperature to high temperature environment, as this causes condensation, which may result in fire, electric shock, or other hazards.

**19. Clean only with dry cloth---**Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft cloth for cleaning.

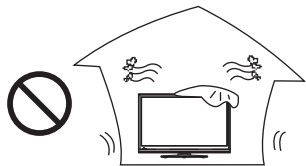

**20. Ventilation---**Do not block any ventilation openings. Install the CTOUCH interactive display in accordance with the manufacturer instructions. The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; therefore do not place the product in an enclosed space such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.



**21.Heat sources---**Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



**22.Panel protection---**The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the display panel breaks.

**23.Pixel defect---**The display panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

**WARNING:** For continued safety, apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection.



### **About Location/ Environment**

#### **Do not use in hot and cold rooms (locations)**

- When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
  - Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, or in high humidity, as this may cause the cabinet to deform and the screen to malfunction, and affect the CTOUCH interactive display's performance.
  - **Environment condition:**
    - Operating temperature: 5°C – 35°C
    - Operating humidity: 20 – 80 % ( no moisture condensation )
    - Storage temperature: -15°C – 45°C
    - Storage humidity: 10 – 80 %
    - Atmospheric pressure: 86 kPa ~106 kPa
- 

### **About After-Image**

The extended use of fixed image program material can cause a permanent after-image on the screen.

This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible screen deterioration can be limited by observing the following steps:

- A. Reduce the brightness/contrast setting to a minimum viewing level.
- B. Do not display the fixed image for extended periods of time.
- C. Turn the power off when not in actual use.

#### **Important Information Regarding Use of Video Games, Computers, Captions or Other Fixed Image Displays.**

- Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the screen.  
Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

#### **CAUTIONS:**

- The permanent after-image on the screen resulting from fixed image use is not an operating defect and as such is not covered by the warranty.
  - This product is not designed to display fixed images for extended periods of time.
- 

### **Cleaning and Maintenance**

#### **To clean this unit, wipe with a soft, dry cloth.**

Clean the cabinet with a soft, lint-free cloth. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the cabinet with the cloth. Use a clean cloth to dry the cabinet.

- Clean the screen with a soft, lint-free cloth.
  - Use eyeglass cleaner to remove stubborn dirt from the screen.
  - Never use alcohol, paint thinner or benzene to clean this unit.
- 

### **Carrying or Moving the CTOUCH interactive display**

- When you move the CTOUCH interactive display, hold the frame of the CTOUCH interactive display.
  - Be aware of the danger or harm which may be caused by carrying or moving the CTOUCH interactive display, as the bezel is very thin.
  - When transporting, do not subject the unit to shocks or vibration, or excessive force.
- 

### **Environmental Protection**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




# Standard Accessories

---


## Unpacking

The following items are included in your product box.

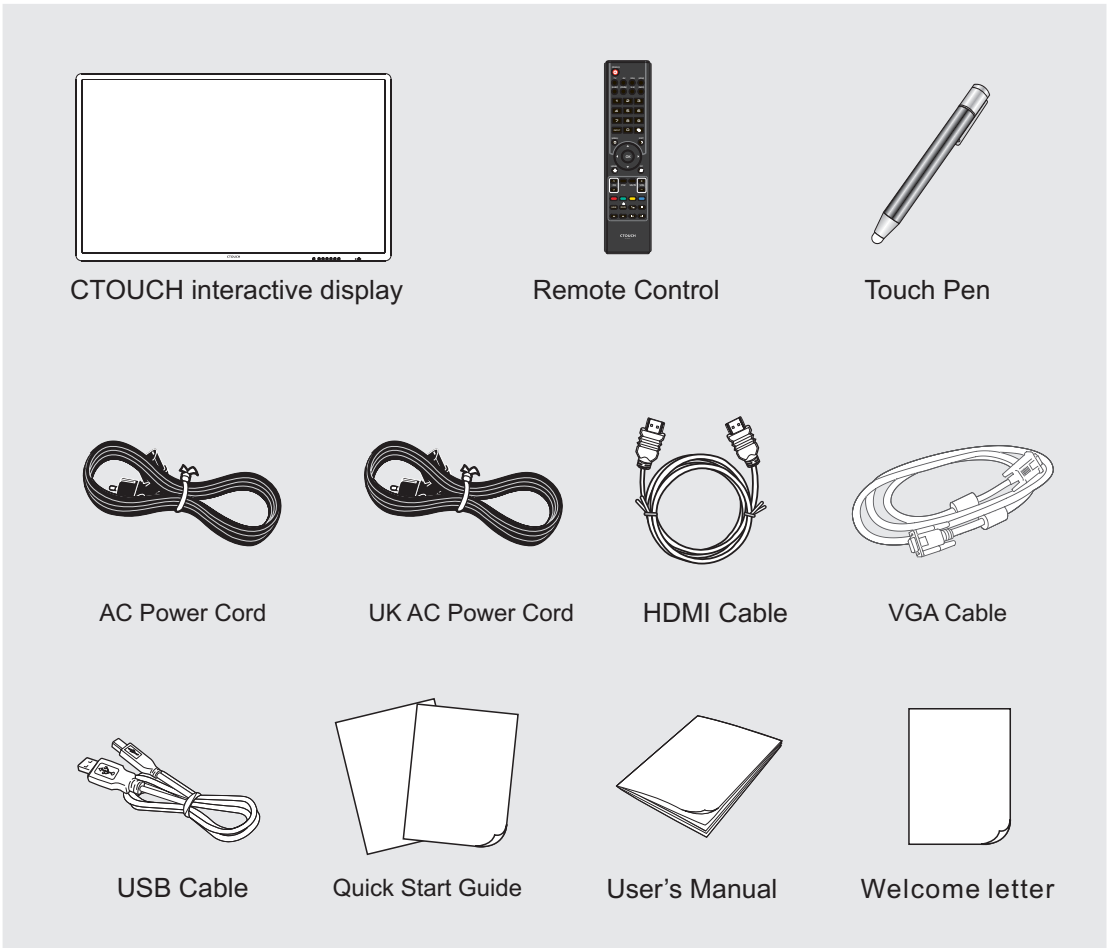

**Note:** The illustrations may differ slightly from the items shipped with your product.

## Viewing the control panel

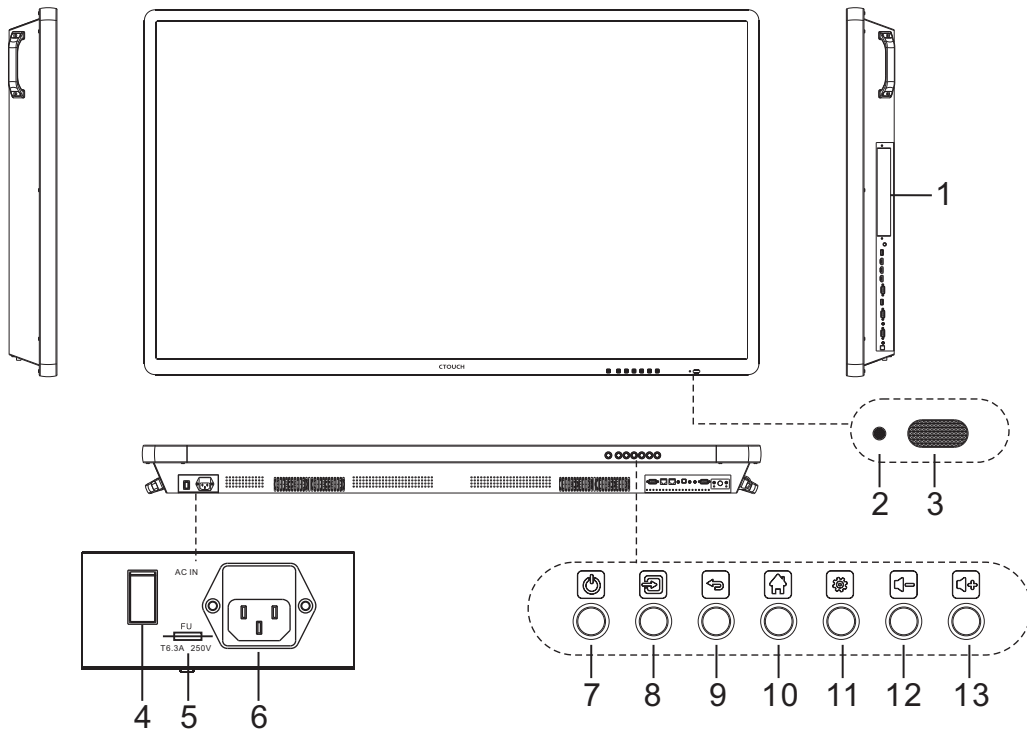


1	Internal PC module slot	Insert the CTOUCH internal PC module (Optional)
2	Power LED	Red: In standby mode. Blue: In power on mode.
3	Remote control sensor	Aim the remote control towards this spot on the CTOUCH interactive display.
4	Power Switch	Push to (I) to connect the power, push to (O) to cut off. <b>Note:</b> Power switch can not be covered, and should keep the power switch can be conveniently operated.
5	Fuse	T6.3A 250V
6	AC IN	Plug the AC cord into this jack and into a power outlet. (~100-240V 50/60Hz)
7		Switch the CTOUCH interactive display power on or standby.
8		Press the button to display input source menu or exit the menu screen.
9		Press the button to return to previous menu.
10		Press the button to display desktop (Home page) on the screen.
11		Press the button to open the setting menu.
12		Press the button to volume down.
13		Press the button to volume up.




# Identification of Controls

## Viewing the connection panel

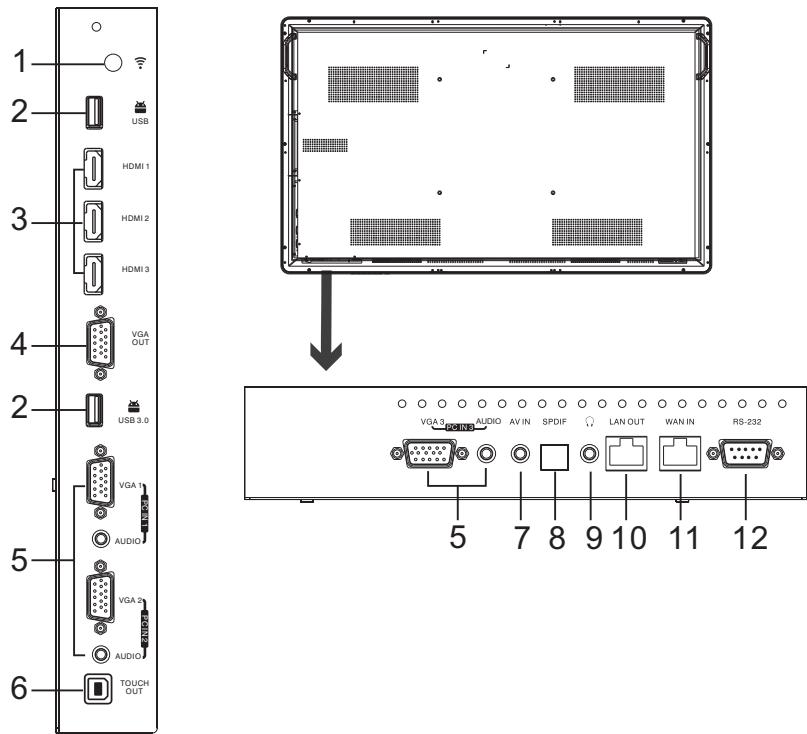

1		Wi-Fi antenna .
2	USB2.0/3.0	USB standard interface, enable connection to USB2.0, USB3.0 standard devices.
3	HDMI1/2/3 Input	To connect with those equipments with HDMI or DVI interface. (A HDMI-to-DVI adapter cable is required when you are connecting a DVI-equipped device to the CTOUCH interactive display.)
4	VGA OUT	Output the currently selected PC IN 1/2/3 signal.
5	PC IN1/2/3	Enable connection to PC or other external devices with VGA/AUDIO ports.
6	TOUCH OUT	Output the touch for external devices connected to PCx or HDMIx port which support touch system.
7	AV IN	Input port for composite video.
8	S/PDIF digital audio output	Connect a digital sound system to this jack.
9		Connect headphones to this jack. The CTOUCH interactive display is the current audio output.
10	LAN OUT	The built-in router output port. Connection to another computer or other Internet enabled devices.
11	WAN IN	The built-in router input port. Connect to the external network.
12	RS232	For service, software upgrades and the other uses.

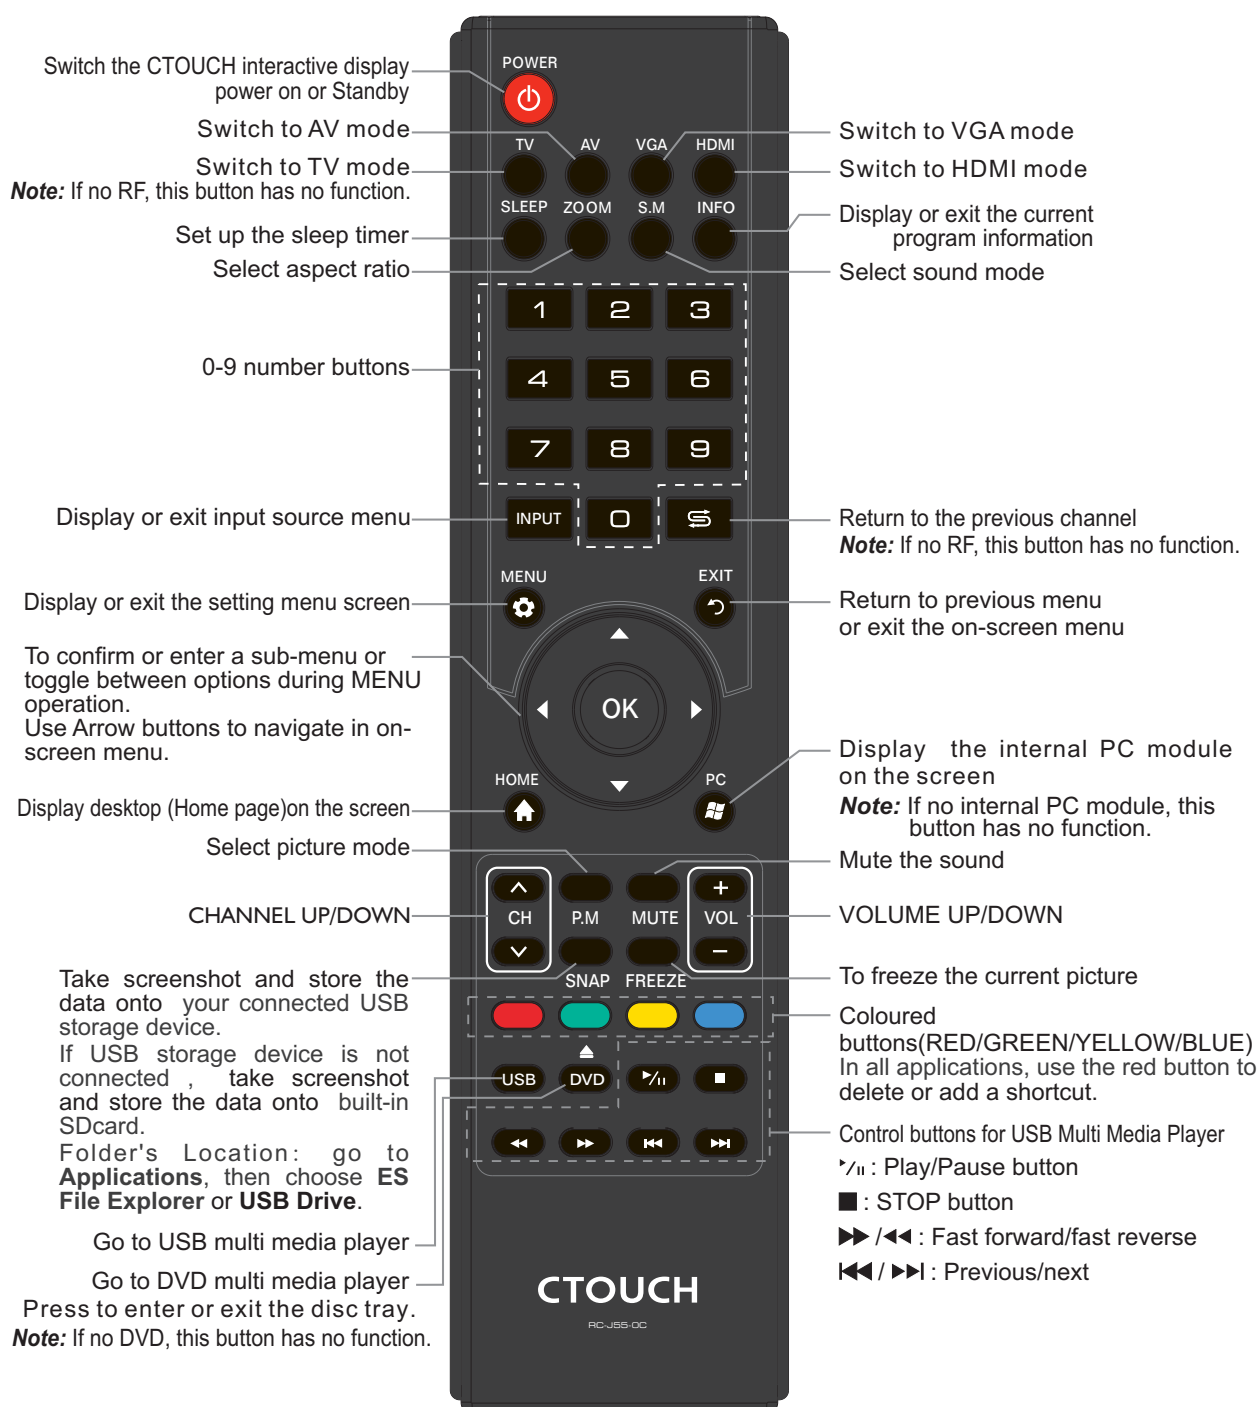


## Notes:

- This operation manual provides a description based on operating functions with the remote control.
- In different mode, some buttons may have different function.

## Remote Control

---

### *Installing remote control Batteries*

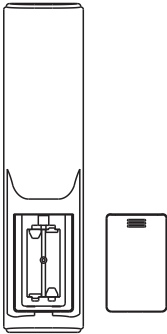

#### **To install remote control batteries:**

1. Open the battery cover.
2. Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
3. Replace the cover.


#### **Battery precautions:**

Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the instructions below.

- Place batteries with their terminals corresponding to the (+) and (–) indications.
- Different types of batteries have different characteristics. Do not mix batteries of different types.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
- Remove batteries as soon as they are non-operable. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe with a cloth.
- Dispose of batteries in a proper manner.
- If the remote control is not used for an extended period of time, remove the batteries.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

---

### *Aiming the remote control*

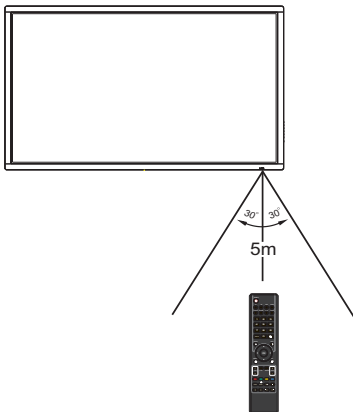


Use the remote control by pointing it towards the remote sensor on the front of your CTOUCH interactive display. Objects between the remote control and the remote sensor may prevent proper operation.

#### **Cautions regarding use of remote control**

- Do not expose the remote control to shock. In addition, do not expose the remote control to liquids, and do not place in an area with high humidity.
- Do not install or place the remote control under direct sunlight. The heat may cause deformation of the unit.
- The remote control may not work properly if the remote sensor window of the main unit is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or the CTOUCH interactive display set, or operate the remote control closer to the remote sensor window.

## Cautions Before Connecting


- When connecting an external device to the CTOUCH interactive display, make sure that the CTOUCH and the external device are turned off.
- Check the plugs at the ends of cables to make sure that they are the correct type before you try plugging them into jacks on the CTOUCH interactive display.
- Make sure that all plugs are securely inserted into the jacks. Loose connections can result in image or color problems.
- The illustration of the external device may be different depending on your model.
- Refer to the operating manual of the external device as well.

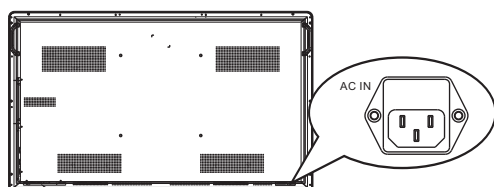

1. Connect the female plug to the AC socket on the unit.
2. Connect the male plug to the wall outlet as illustrated.

### Note:


- This product should be operated only from the type of power source indicated on the marking label.
- Always unplug the AC cord from power outlet when not using for a long period of time.

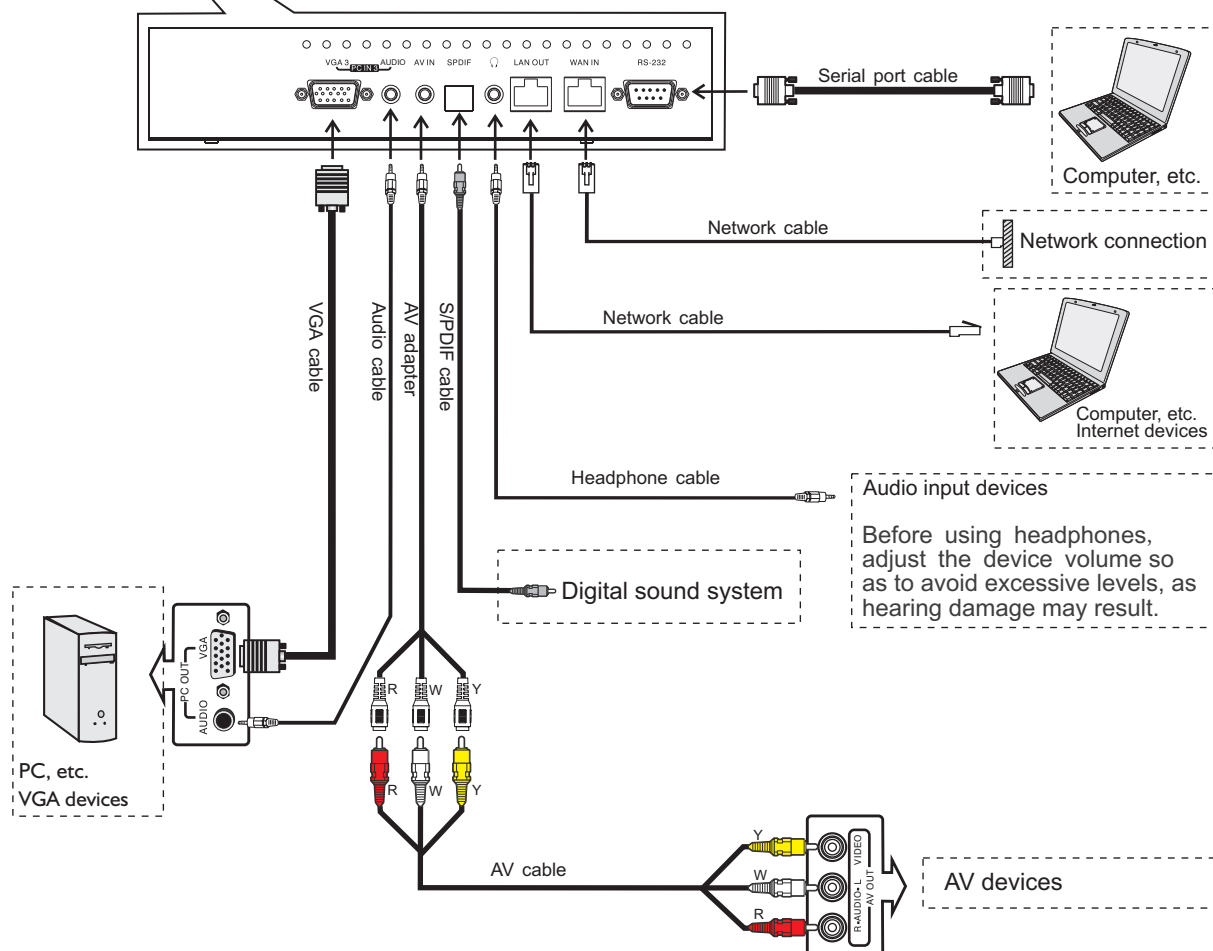

## Connections

Tighten the Wi-Fi antenna in clockwise direction. The Wi-Fi antenna is able to access Wi-Fi network.

Inside AP. When network cable is plugged in WAN port, the antenna will generate Wi-Fi network.

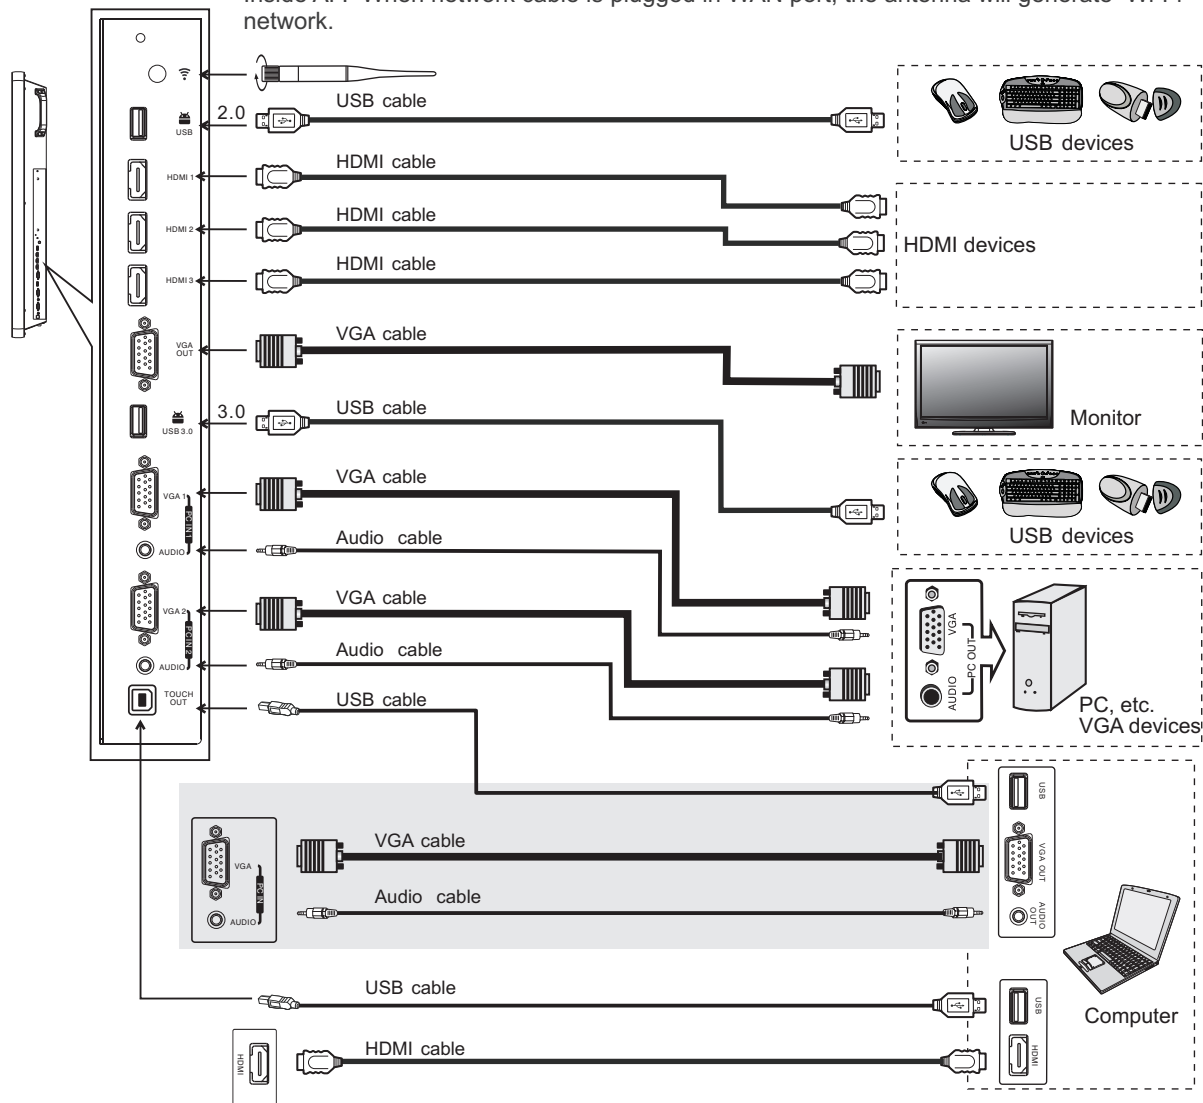

Connect PC with VGA cable or HDMI cable.

Connect TOUCH OUT with USB cable to PC USB port. After installation of the driver, it can control the external computer by native touch control. (Only for PC 1/2/3, HDMI 1/2/3 signal)



Please choose the proper method of connection based on your device.

- Notes:**
1. The CTOUCH interactive display is multiple USB port designed(3.0, 2.0), when connect with USB device, please select the appropriate port.
  2. The VGA output is signal of what has been currently selected from PC1/2/3.

## Turning the CTOUCH interactive display on or off

- 1 Plug the power cord into an AC power outlet. Press **Power Switch** on the CTOUCH interactive display.
- 2 Now the CTOUCH is in standby mode. **Wait a moment** until the power indicator lights up, then press **POWER** ⏻ to turn on the CTOUCH interactive display. (Be sure to wait for a few seconds before pressing POWER button. If you promptly press POWER button then the CTOUCH interactive display may not respond or act wrongly.)
- 3 Press ⏻ button again to turn off the CTOUCH and put the display in standby mode.  
To cut off the power completely, press **Power Switch** on the back of the CTOUCH.


**Note:** If the CTOUCH interactive display does not receive a displaying signal for a certain time, the CTOUCH goes into standby mode.

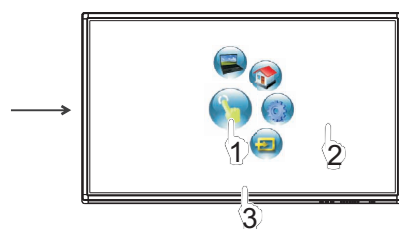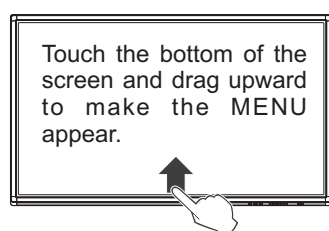

- 1 Press and drag the MENU to any place of the screen. Touch once to control the surrounding MENU appear or disappear.
- 2 Touch once outside the MENU, the MENU disappear.
- 3 When displaying at USB interface, touch once at the lower part of the screen, the display control menu will appear.


Switch to the internal PC module interface

**Note:** If no internal PC module, this icon is not displayed on the screen.


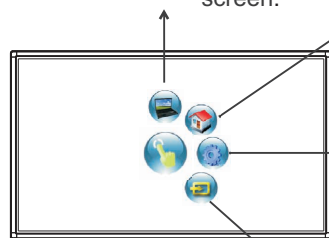


Switch to the Home page (Android Interface)

Switch to the display menu screen

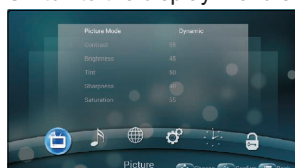


Switch to different input source, i.e. HDMI, VGA, etc.

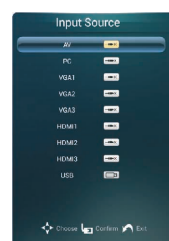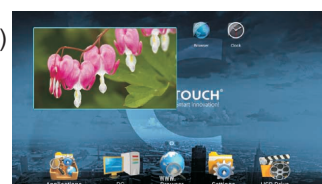




## Menu List

### Adjusting Picture mode

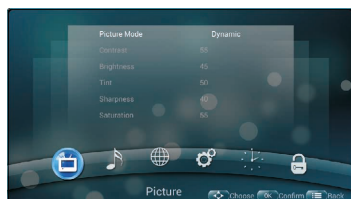

Picture	Picture Mode	Select your favourite picture mode for each input <b>[Dynamic]</b> / <b>[Standard]</b> / <b>[Soft]</b> / <b>[User]</b> .
	Contrast	Adjust the contrast.
	Brightness	Adjust the brightness.
	Tint	Adjust the image hue. (Only for NTSC system)
	Sharpness	Adjust the sharpness.
	Saturation	Adjust the color saturation.
	Backlight	Set up the overall brilliance of the screen.
	Energy Save	The backlight brightness is decreased. <b>[Off]</b> / <b>[Save1]</b> / <b>[Save2]</b>
Screen	Clock	Adjust the screen size.
	Phase	Adjust the focus of stable images.
	Horizontal Position	Move the image right or left.
	Vertical Position	Move the image up or down.
	Auto Tune	Automatically adjust the image settings such as position and phase.
Color temperature		Select the color temperature. You can select <b>Warm</b> , <b>Cool</b> or <b>Normal</b> .
Aspect ratio		Select the aspect ratio (display proportions) according to your video signal type or personal preference <b>[16:9]</b> / <b>[4:3]</b> / <b>[Panorama]</b> / <b>[Just Scan]</b> / <b>[Zoom1]</b> / <b>[Zoom2]</b> .
Noise Reduction		Select the noise reduction mode to reduce picture noise (snow) You can select <b>Weak</b> , <b>Middle</b> , <b>Strong</b> , or <b>Off</b> .
DLC		Enhance the contrast ratio between light and dark areas of the picture. You can select <b>On</b> or <b>Off</b> . If this is set to <b>On</b> , <b>Backlight</b> cannot be adjusted.

### Adjusting Sound mode

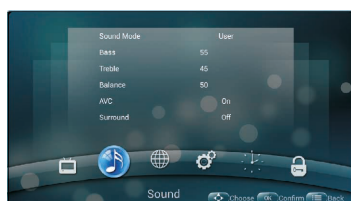


Sound	Sound Mode	Select your favourite sound mode for each input <b>[Alive]</b> / <b>[Standard]</b> / <b>[Music]</b> / <b>[Movie]</b> / <b>[News]</b> / <b>[User]</b> .
	Bass	Adjust Bass (low sounds) .
	Treble	Adjust Treble (high sounds).
	Balance	Adjust volume level of right and left speakers.
	AVC	Select <b>[On]</b> to equalize overall volume levels across all channels. Select <b>[Off]</b> to turn off the auto volume control.
	Surround	Turn the Surround sound effect on or off.
	SPDIF Output (digital signal only)	Select the digital audio output mode for S/PDIF. Select <b>[RAW]</b> to output audio signal as its original format. Select <b>[PCM]</b> to output audio signal by PCM format.
	Audio Only	Press <b>OK</b> to turn off the picture on your CTOUCH interactive display and listen to the program audio only.

## Adjusting Setting menu




Setting	OSD Language	Select on-screen menu language.
	Menu Time	Select OSD menu display time.
	Restore To Default	Reset all settings to factory defaults.

## Time Setup

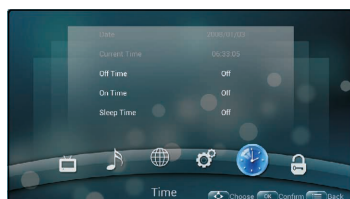

Time	Date	Set current date manually.
	Current Time	Set current time manually.
	Off Time	Set Off timer to switch the CTOUCH interactive display to standby at a specified time.
	On Time	Set On timer to turn on the CTOUCH interactive display automatically to source at a certain time.
	Sleep Time	Set the duration of time until the CTOUCH interactive display automatically goes into Standby mode. <b>[Off] / [10 Minutes] / [20 Minutes] / [30 Minutes] / [60 Minutes] / [90 Minutes] / [120 Minutes] / [180 Minutes] / [240 Minutes].</b>

## Parental Control

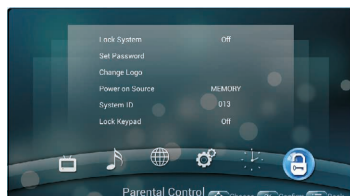

Select Parental Control menu, press OK to access the menu. Now a password is required to input. (The default password is 0000. The unit provides a super password "2580".)

Parental Control	Lock System	Set to <b>ON</b> , Restore To Default is locked. Reset settings to factory defaults, just input the correct password.
	Set Password	Password settings.
	Change Logo	Navigate to the <b>Parental Control</b> menu and input the correct password to access. Select <b>Change Logo</b> item, press <b>OK</b> to access and change Logo. <b>Notes:</b> 1. Save the logo which you are about to change in the USB stick. The logo file sizes should be <512K, and rename it as boot0.jpg. 2. Insert the USB stick into the USB port on the Android board.
	Power on Source	Power on Source Setting, in <b>MEMORY</b> mode, when the CTOUCH interactive display powered on, it will automatically switch to the source when it powered off last time. otherwise, it is in setting mode.
	System ID	Setting the device ID. (The ID must be in the range of 0-255, but 138, 168 are unused ID.)
	Lock Keypad	The CTOUCH interactive display buttons is locked. <b>OFF:</b> Select to enable the panel buttons. <b>ON:</b> Select to disable the panel buttons.

## Home Page Overview

Display system program


**Shortcuts** you created on Home page



Go to your **USB multi-media player**.



Open the **System Setup** menu.

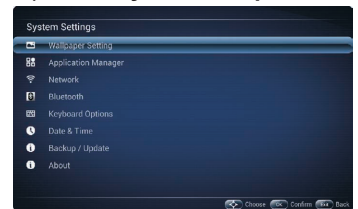

Go to your **web Browser**.




Switch to the internal PC module interface

**Note:** If no internal PC module, VGA1 mode will be displayed on the screen.

Show **all applications**


Touch the screen and drag to the left direction to return to Home Page

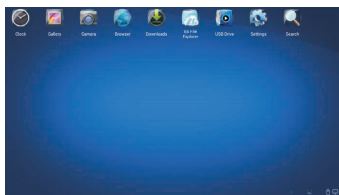


**Note:** When using the app Camera, store the data onto your connected USB device. If USB device is not connected, store the data onto built-in SDcard.

Folder's Location: go to **Applications**, then choose **ES File Explorer** or **USB Drive**.

**Note:** The layout of menu may vary upon different models you purchased.

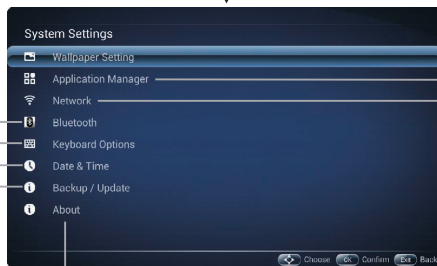

Display information

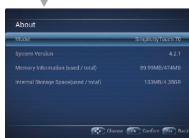


Display current network status.




Network Setting



Display system information or restore to factory default.

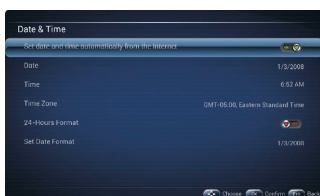

**Note:** To manually set date and time, you should toggle "Set date and time automatically from the Internet" to OFF.

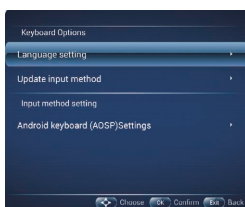


To set on-screen language  
To set default input method  
To set Android keyboard(AOSP)



Automatic search for Bluetooth devices when you toggle the "Bluetooth" to ON.



Wallpaper Setting

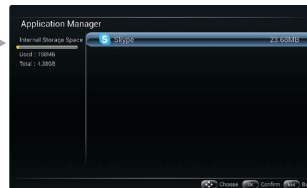

Press OK to access its edit menu.




Force this application to stop  
Uninstall this application  
Clear data of this application




Internal routing setting

If the internal AP doesn't work, reset via Internal Routing Hardware Reset.

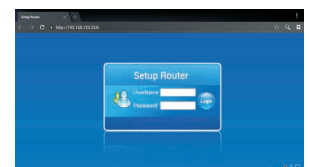

Input the default  
UserName: **admin**, skip  
the default password  
setting as there is no  
default password, then  
press Login button login.

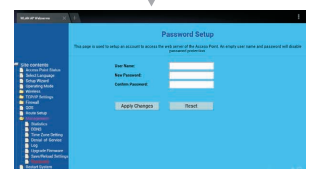


Change the UserName  
and Password: Enter the  
**Site contents** menu,  
select **Management**, then  
**Password**.

## Wired Network Setting





Wireless Network Setting

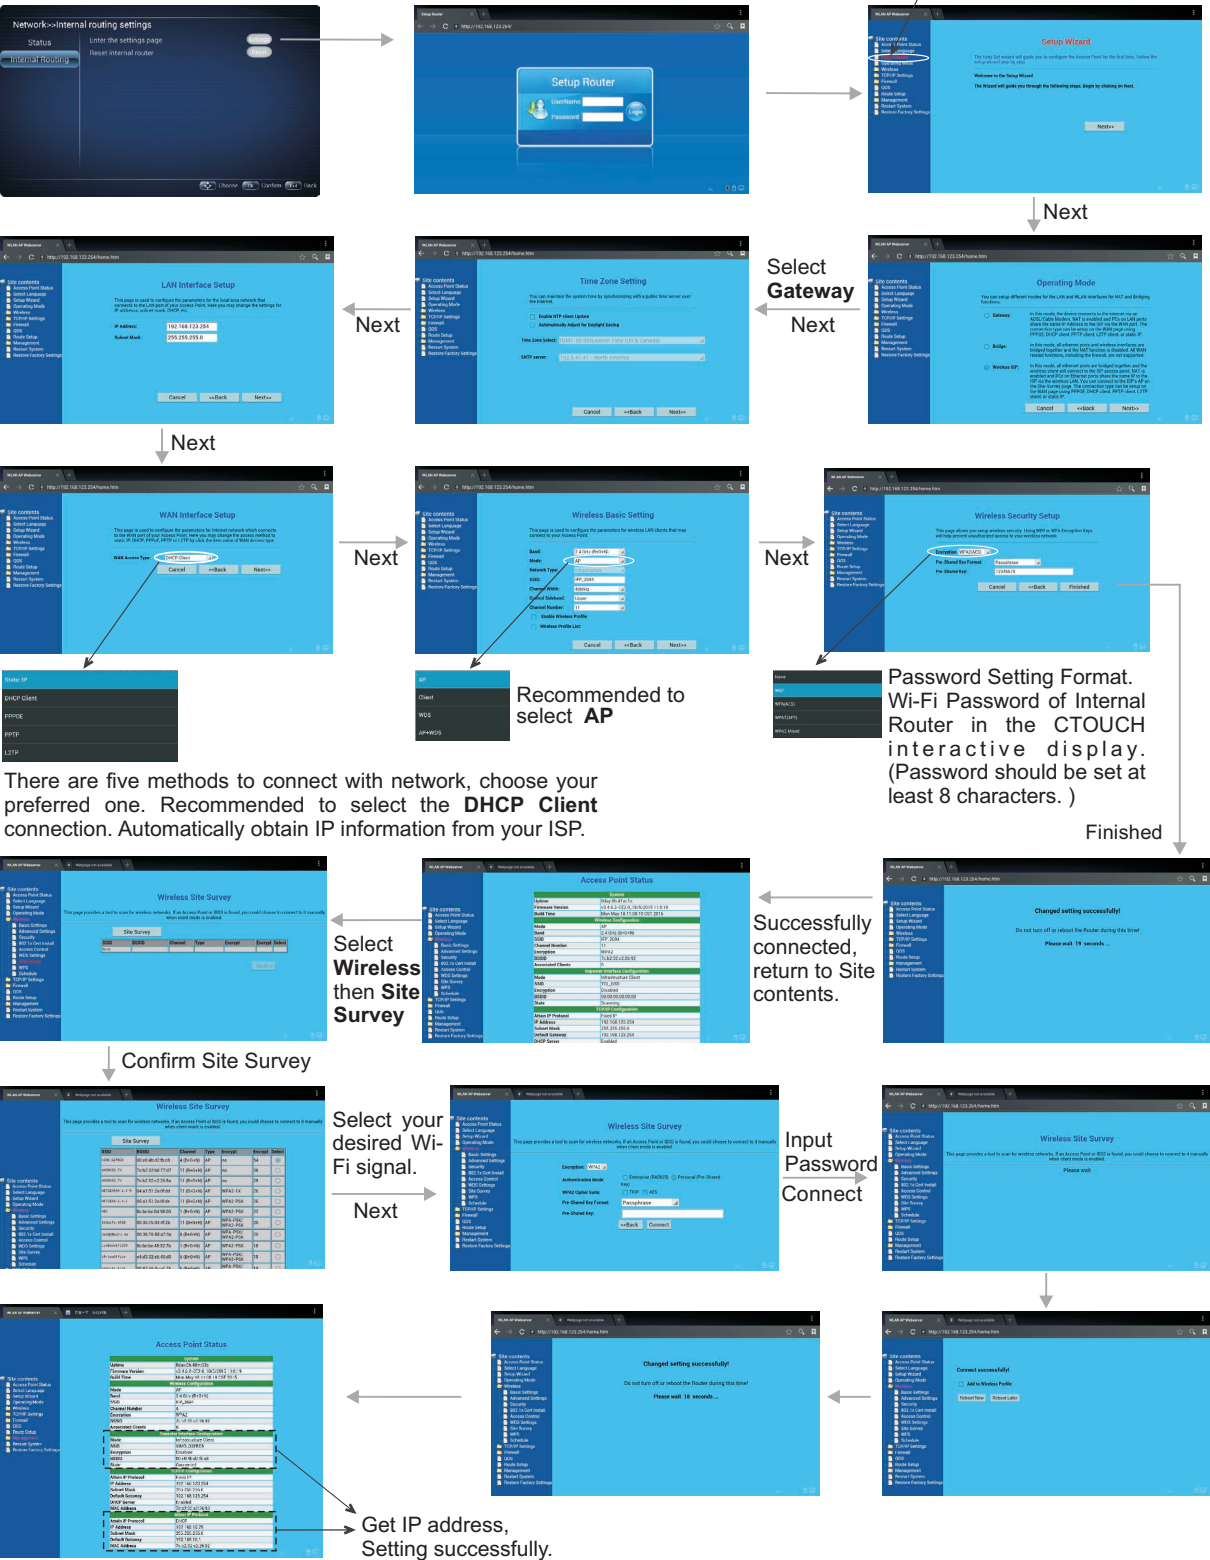



## Using USB Multi Media Player

You can connect a USB storage device to your CTOUCH interactive display to view compatible photo, movie on the large screen of the CTOUCH or play compatible music so that the sound can be output from the CTOUCH interactive display's speaker.

To use USB multi media player, please go to USB source by pressing USB button. Or you can press **Home** button to display Home Page and then select **USB Drive** icon to access.

### Notes:

- Never remove the USB storage device or turn off the CTOUCH interactive display while using the USB storage device.
- It is recommended that you back up your USB device data.
- The USB menu may vary in different situation.
- If you want to pull out the USB device, please exit USB mode first. For instructions on using your USB device, refer to the user's manual of your USB device.
- Please name your files in Latin alphabet. Otherwise the file names can not be shown correctly.
- Certain types of USB device may not be compatible with this CTOUCH interactive display.

## USB multi media interface introduction



**Method 1:** Press **USB** button to access

**Method 2:** From **Home Page**, select **USB Drive** icon to access.

To select and play files from different sources.  
(you can select from local disk device (USB device),  
network DLNA device, network SAMBA device)



**Video:** Select to play compatible **movie**.


**Music:** Select to play compatible **music**.

**Picture:** Select to view compatible **photos**.

**All:** Select to show **all files** so that you can easily select any file to play.

## Playing Photo


With the photo viewer, you can view compatible photos (in JPG, BMP or PNG format). Also you can zoom, rotate photo, etc.

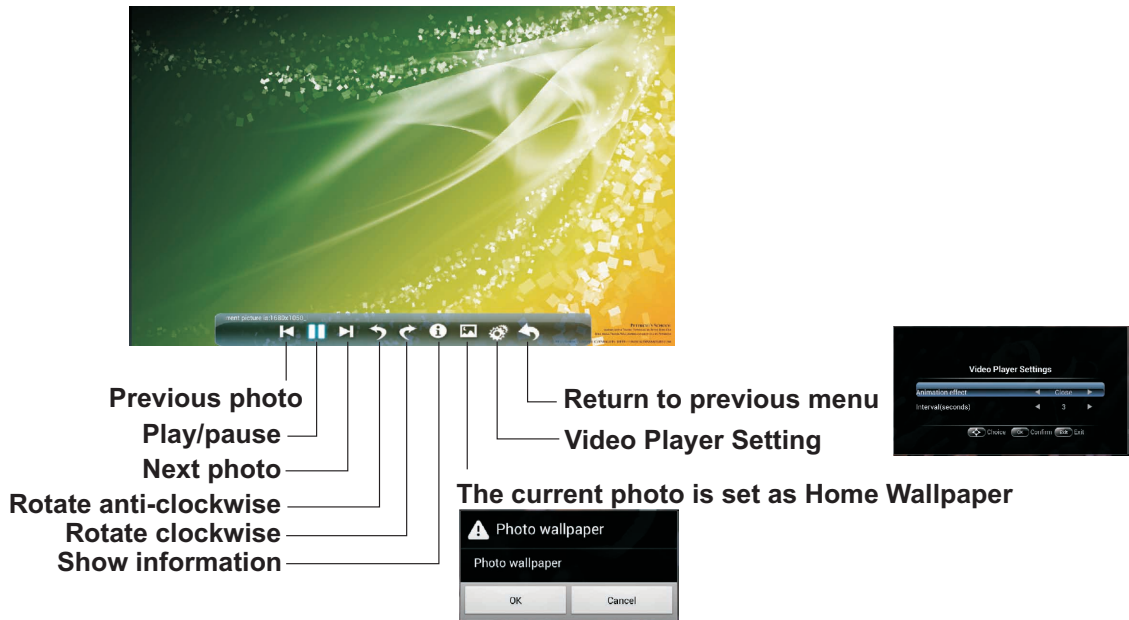

**Note:** You can also use  $\blacktriangleleft/\text{II}$  (Play/Pause),  $\blacksquare$  (STOP),  $\blacktriangleleft\blacktriangleleft$  (Previous),  $\blacktriangleright\blacktriangleright$  (Next) on the remote control to operate.

## Playing Music

With the USB music player, you can play compatible music (in MP3 or AAC format).

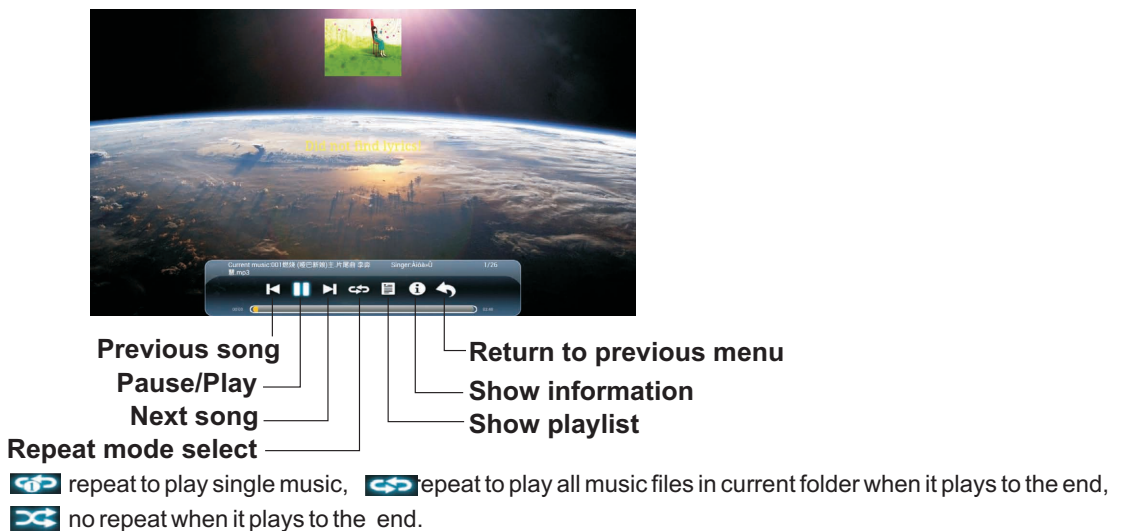


**Note:** You can also use  $\blacktriangleleft/\text{II}$  (Play/Pause),  $\blacksquare$  (STOP),  $\blacktriangleleft\blacktriangleleft$  (Previous),  $\blacktriangleright\blacktriangleright$  (Next) on the remote control to operate.

# Using USB Multi Media Player

## Playing Movie

With the USB movie player, you can play compatible movie (in AVI, MPG, MPEG, DAT, MP4, TS, RM/RMVB, or MKV/MOV format).

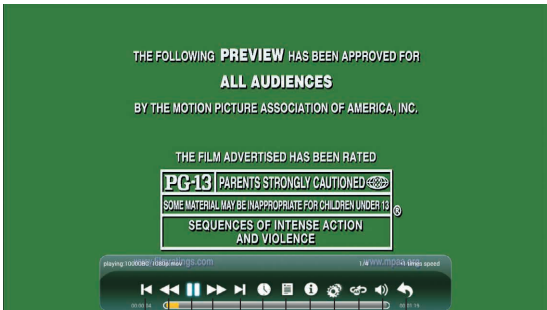


THE FOLLOWING **PREVIEW** HAS BEEN APPROVED FOR  
**ALL AUDIENCES**  
BY THE MOTION PICTURE ASSOCIATION OF AMERICA, INC.

THE FILM ADVERTISED HAS BEEN RATED  
**PG-13** PARENTS STRONGLY CAUTIONED  
SOME MATERIAL MAY BE INAPPROPRIATE FOR CHILDREN UNDER 13  
SEQUENCES OF INTENSE ACTION  
AND VIOLENCE

playing: 1080i.MKV (H.264+AAC) [01:05:10] 148 MB 100% CPU usage, sound

Previous movie  
Fast reverse  
Play/pause  
Fast forward  
Next movie  
Return to previous menu  
Adjust the volume  
AB Section repeat  
Playing settings  
Show information  
Show playlist

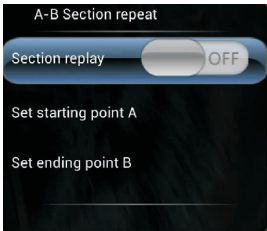

A-B Section repeat


Section replay ☐ OFF

Set starting point A

Set ending point B


Now AB repeat starts. To cancel, highlight **Section replay** and toggle it to **OFF**.

Skip to specific point by input time

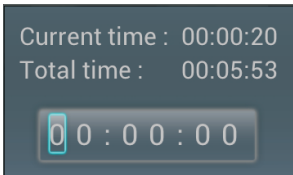

Current time : 00:00:20  
Total time : 00:05:53

00:00:00

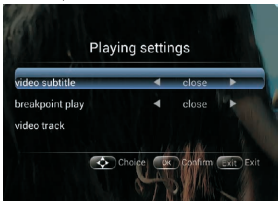

Playing settings

video subtitle ◀ close ▶

breakpoint play ◀ close ▶

video track

◀ Choose ▶ Confirm ▶ Exit

If, after reading these operating instructions, you have additional questions related to the use of your CTOUCH interactive display, please call the services center in your local area, for contact information and full warranty conditions refer to [www.ctouch.eu/warranty](http://www.ctouch.eu/warranty).

Before calling service, please check the symptoms and follow suggested solutions.

### Remote Control

Problem	Possible Solutions
Remote control does not operate	<ul style="list-style-type: none"><li>• Make sure the power cord is plugged in.</li><li>• Check the orientation of the batteries.</li><li>• The batteries could be weak. Replace the batteries.</li></ul>

### Video and Audio

Problem	Possible Solutions
No picture (screen not lit), No sound	<ul style="list-style-type: none"><li>• Test another source.</li><li>• Make sure the power cord is plugged in.</li><li>• Press POWER on the CTOUCH interactive display or on the remote control.</li></ul>
Dark, poor or no picture (Screen lit), good sound	<ul style="list-style-type: none"><li>• Test another source.</li><li>• Select a proper picture mode.</li><li>• Adjust the brightness in the video setting.</li></ul>
No color/dark picture/abnormal color	<ul style="list-style-type: none"><li>• Adjust the color saturation in the video setting.</li></ul>
Dotted lines or stripes	<ul style="list-style-type: none"><li>• Move the CTOUCH interactive display away from noise sources such as cars, neon signs, or hair dryers.</li></ul>
Good picture, no sound	<ul style="list-style-type: none"><li>• The sound may be muted. Press MUTE again to cancel.</li><li>• Verify if sound should output and/or test another source.</li></ul>
Audio noise	<ul style="list-style-type: none"><li>• Communication problems may occur if infrared communication equipment (e.g., infrared cordless headphones) is used near the CTOUCH interactive display. Move the infrared communication equipment away from the CTOUCH until the noise is eliminated.</li></ul>

### General

Problem	Possible Solutions
Some items can't be accessed	<ul style="list-style-type: none"><li>• If a setting option appears in gray, this indicates that the settings option is unavailable in current input mode. Some display menu items may be different when the unit works in different sources</li></ul>
Remote control command is not working in some cases.	<ul style="list-style-type: none"><li>• During the timing of USB device detection (i.e. when the CTOUCH interactive display is turned on with USB device connected, or when you plug in USB device during the working of the CTOUCH), the display may not react on remote control buttons in such case. Wait some time, then it is OK.</li></ul>
Control buttons do not operate	<ul style="list-style-type: none"><li>• Disconnect the power cord and wait for a few seconds. Then re-plug the power cord and turn on the unit again.</li></ul>

**Note:** If your problem is not solved, turn your unit off and then on again.

**Cautions:** Never attempt to repair a defective the CTOUCH interactive display yourself.

## Specifications

Model No.		CLA-55FHDA1	CLA-65FHDA1	CLA-70FHDA1
Visible screen size		55 inches(diagonal)	65 inches(diagonal)	70 inches(diagonal)
Power Source		AC 100-240V, 50/60Hz	AC 100-240V, 50/60Hz	AC 100-240V, 50/60Hz
Current Max.		2.2 A	2.6 A	2.9 A
Power Consumption		145 W	240 W	265 W
Standby condition		< 0.5 W	< 0.5 W	< 0.5 W
Number of pixels (Display panel )		1920×1080	1920×1080	1920×1080
Dimensions (W × D × H) (Unit: mm)		1297.5×115×778.3	1520×115×906	1628×105×966
Mass		About 48 Kg Net	About 68 Kg Net	About 70 Kg Net
Operating conditions		<b>Operating temperature:</b> 5°C - 35°C , <b>Storage temperature:</b> -15°C - 45°C, <b>Operating humidity:</b> 20 % - 80 % (no moisture condensation), <b>Storage humidity:</b> 10% - 80%, <b>Atmospheric pressure:</b> 86kPa ~ 106kPa		
Connection terminals of the CTOUCH interactive display	AV IN	1		
	PC IN	3		
	VGA OUT	1		
	HDMI Input	3		
	USB	2		
	WAN IN	1		
	LAN OUT	1		
	S/PDIF OUT	1		
	Headphone	1		
	RS232	1		
	TOUCH OUT	1		

### Notes:

1. Design and specifications are subject to change without notice.
2. Weight and dimensions shown are approximate.
3. Specifications and external appearance may be changed for the sake of improvement.